


BOSSTAB Edge Nexus Screw Mount

Getting started guide

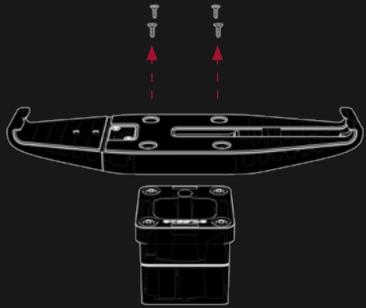


1. Unscrew screws and lift the Edge case off the stand.




2. Follow the above locations to line up your surface mounting and cable feed.




3. Refer to the mounting guide for assistance in drilling pilot holes and a hole for your charging cable if required.

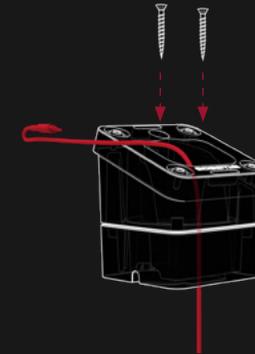


4. With the cable channel facing out the left hand side, screw down using the wood screws provided. Ensure you feed cable through before mounting.

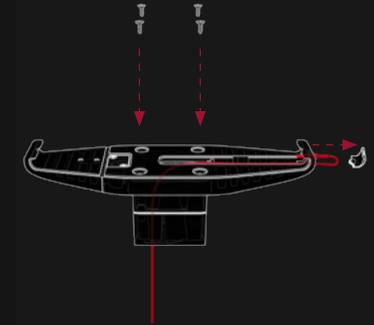


5. Remove the cable clip and place case back on the stand and screw back in the 4 screws.

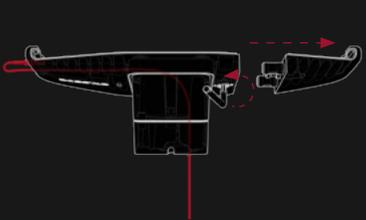


6. Unlock the security lock with the L shape key and slide the clamp out.

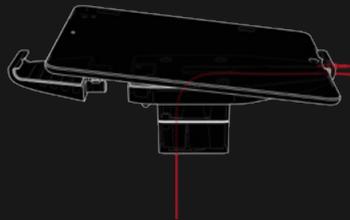

7. Squeeze the tablet into the clamp with the charging cable running behind the tablet.

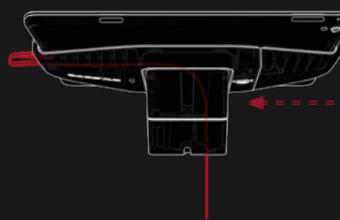

8. Re-attach the clamp arm by sliding in and squeezing tablet.

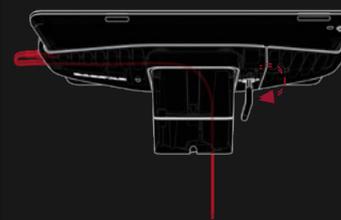

9. Remain holding clamp together until you have rotated the security lock with the L shape key into the lock position.

For more information or to contact our sales & customer support team please click on the links below:

 
[Contact Us](#)

[Warranty & Returns](#)


[Shipping](#)




Unlock




1. Remove the cable clip and feed charging cable through the stand.

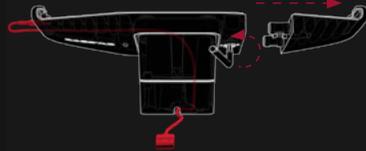


2. Unlock the security lock and slide the clamp out.

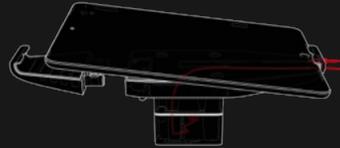

3. Squeeze the tablet into the clamp with the charging cable running behind the tablet.

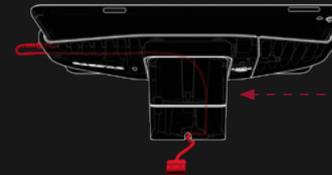

4. Re-attach the clamp arm by sliding in and squeezing tablet.

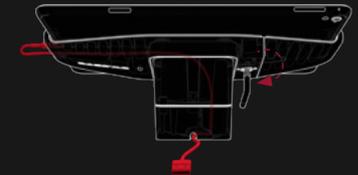

5. Remain holding clamp together until you have rotated the security lock in the lock position.



6. Wipe base of stand and your mounting surface with alcohol wipes provided and let dry.




7. Stick 3M adhesive to the base of stand and firmly place down on your mounting surface. Let the stand sit for 24 hours before use.



Optional Position Lock

Rotate stand 45 degrees so cable hole is on the left, then screw in lock screw as shown. This will lock the rotation for a fixed option.

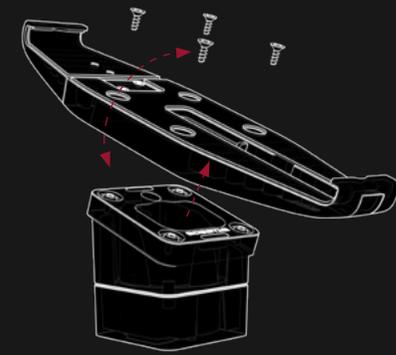

Optional Rotation Lock

To change your stand to landscape or portrait, unscrew to remove case and place back on in desired angle.