

# Cash Drawer

 
## Angled Design Installation Guide

**BOSS-TAB**




### Step 1 - Connect to Printer

Lift Cash Drawer and stand upright to access network port. Using the supplied 6-pin RJ11 cable, connect Cash Drawer to any EPSON POS Printer. See overleaf for further information.

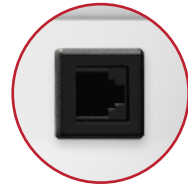

### Step 2 - How to activate Cash Drawer

 Lift Cash Drawer and stand upright to access lock. Using the keys, turn the lock horizontal for printer connection mode and turn lock vertical to lock.

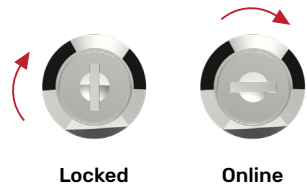

# Cash Drawer

## Angled Design Troubleshooting

**BOSS-TAB**

 
 
### Emergency open

There is an emergency opener located at the bottom of drawer. Move the opener as instructed to open. It will not open when lock is in 'locked' position.



### Drawer removal

With cash draw opened, remove cash tray inserts. Lift the left handle and press the right handle down then slide the Drawer out.

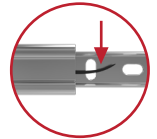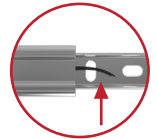

### Printer cable port

When connecting the Cash Drawer to your printer, ensure you use the provided cable to plug into the phone port. Cash Drawer will not work plugging into an ethernet port.



#### Ethernet port



Gaps on either side of cable



#### Phone port



Snug fit when plugged in

### Maintenance



Drawer slides should be cleaned and lubricated every three months. Using a dry, lint free cloth, wipe out the old grease from inner and outer slides. Do not use water or any type of liquid cleaner. Apply a thin layer of lithium-based bearing grease to the inner and outer slides and move the drawer back and forth to properly coat.